

F-400 POWER FOG MACHINE

USER MANUAL



AUSTRALIA • NASHVILLE • LOS ANGELES • FORT LAUDERDALE

11054 County Road 71
Lexington, AL 35648

www.globalspecialeffects.com

(256) 229-5551

Please read over this manual before operating the machine.



Thanks for using the F-400 fog machine.

Information:

Heat-up Time: 3 minutes
Tank capacity: 0.3 quarts
Fogging Distance 11ft
Weight: 3 lb
Output: 2000cu. ff/min
Voltage: AC110V~130V 50/60HZ
Power: 400W
Circuitry Control

Attention:

Please read all notices about operation.
Always keep fogger clean
Indoor use only
Always keep fogger in the horizontal position and don't incline and place upside down.
Power off or pull out plug after use.
This unit is not waterproof, Do not expose to water or excessive dampness
There are no user serviceable parts in this machine. If in need of repair, please contact Global Special Effects.

Proper use

Professional use only
The temperature of this fogger can become very high, keep a **36 inches space between** this machine and flammable materials
Put the machine in an open area and don't cover the cooling holes
Keep **at least 8 inches of space between** the fog machine and walls or barriers
Do not use flammable liquid in fog machine.
Pay attention to all notices sign and operation instructions on all machines.
Use Fog Masters fluids only.
Use of other fog liquid may damage the fogger and will void the warrantee.
Remove all fog liquid before transport.

Remove package and check:

Check the appearance of machine and power line for damage

Installation:

1. Remove all packing material especially from around the spray nozzle.
2. Be sure the fogger is in a horizontal position, open the fog liquid container
3. Pour Fog Master fog liquid in the machine and screw the cover back on the container. Other fog liquid will damage fog machine and void the warrantee.
4. Plug the remote console in the socket of the back of machine.

Operation:

1. Connect the power line to a grounded power socket. Turn the switch to "On" and the machine will heat. The red LED of line console will light once the machine **is** ready.
2. Press red key, the machine will spray fog.
3. If the red LED of remote console does not light the machine is reheating
4. The machine can be suspended (with hanger) or placed on the ground.

5. Always check whether there **is** enough fog liquid in the machine. The operation of the fogger without fluid will damage the heater.

Maintenance:

Screw the cover of liquid container after adding fog liquid.
After about 40 hours **of continual** use, please use 80% distilled water and 20% vinegar to clean the residue in the system
Disconnect the power before you change the fuse. To replace fuse pry open the fuse box, with small flat head screwdriver. Take out the broken fuse and then install the same ampere fuse (10A) in the machine. Close fuse box.

Others:

Clean regularly to extend the lifespan of machine.
Use dry cloths to clean machine and keep dry while stored.